

Mercedes 8018**Protective gloves for fire-fighters – textile – with membrane****Upper material:**

Back
Nomex® combined with ceramic coating
Palm
Kevlar® knitted fabric with silicone coating

Reinforcements:

Back
Special Kevlar® reinforcement system
Kevlar® reinforcement with silicone coating and shock-absorbing filling
Kevlar® reinforcements on fingertips

Intermediate layer:

Aramid non-woven fabric

Membrane:

Membrane Porelle® FR

Lining:

Aramid lining with increased grammage

Wristband

Long Nomex® wristband

Additional information:

Anatomical glove cut
Reflective elements, high-visible Nomex®
Snap hook for hanging gloves on clothing
Tightening strap with Velcro fastening .

Standards:

ÄSSN EN 659:2004+A1:2008

DuPont™ and Kevlar®, Nomex® are trademarks or registered trademarks of E.I. du Pont de Nemours and Company.


Kevlar TextilnÄ Nomex Porelle DlouhÄ~ 3D 4 vrstvy

Size assortment: 7-8-9-10-11-12

However, if you want to know which size your hand belongs to, follow these instructions, please: measure perimeter of your hand with a piece of string or an inch-tape (right-handed people their right hand and left-handed people their left hand) over your joints. Human hand is the widest in the area of finger joints and splint bones. Your hand must be closed so that the end of your index finger can touch slightly your thumb tip. This length in centimetres is the size of your hand and you can find out the needed size of your glove with the following table.

Your hand's perimeter(cm) Glove size

14,2 - 16,7	6
16,7 - 19,2	7
19,2 - 21,7	8
21,7 - 24,2	9
24,2 - 26,7	10
26,7 - 29,2	11
29,2 - 31,7	12

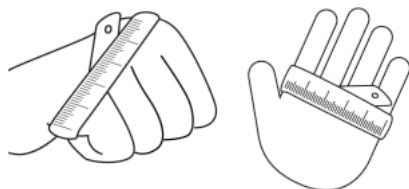

[Do you have questions about this product? Print Contact us](#)

