

iNNovAir™

the latest innovation in respiratory protection

QUALITY meets **VALUE**

Seamlessly
welded cut

Exhalation
valve



Disposable
interchangeable
filter mask

Buckle
strap

Protective
light weight
anti-collapse
mesh

Length
adjustment

Protecting Globally, Envisioning the Future...

CanaSafe™ Industries INC.
1803 - 23 Lorraine Dr.M2N 6Z6,
Toronto ONTARIO, Canada

CanaSafe™ Middle East, FZCO
Jebel Ali Free Zone
Dubai-United Arab Emirates
P. O. Box 261427
Tel: +971 4 8876 244
Fax: +971 4 8876 245

© Copyright CanaSafe™ Industries Inc. 2012



Respiratory Protection





CanaSafe™

Suggested Applications

82105 Particulate Respirator VALVED

- NIOSH N95 Certified filter
- Exhalation Valve for quick release of humidity and heat
- Low breathing resistance with high filtration efficiency
- Adjustable buckle strap for extra comfort
- Anti-collapse plastic mesh for extra durability

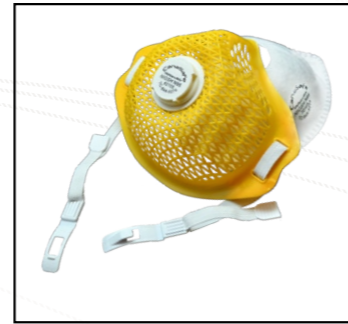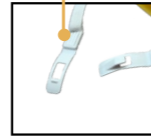

72105 Replacement Filter

- Used for 82105 Mask
- NIOSH N95 Certified filter
- Seamlessly welded cut
- 20 pieces per box
- 12 boxes per case




82115 Particulate Respirator VALVED

- NIOSH N95 Certified filter
- Activated Carbon Layer
- Exhalation Valve for quick release of humidity and heat
- Low breathing resistance with high filtration efficiency
- Adjustable buckle strap for extra comfort
- Anti-collapse plastic mesh for extra durability



72115 Replacement Filter

- Used for 82115 Mask
- NIOSH N95 Certified filter
- Activated Carbon Layer
- Seamlessly welded cut
- 20 pieces per box
- 12 boxes per case

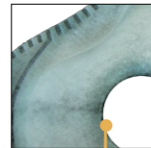

- Groundwork
- Demolition
- Tunneling
- Cement handling
- Concrete dust
- Woodworking
- Plastering
- Grinding
- Sanding
- Sweeping & other dusty operations
- Bagging
- Buffing
- Tiling
- Oxy-Acetylene cutting
- Metal pouring
- Soldering
- Welding – MIG, TIG
- Handling infected animals
- Cleaning animal sheds
- Composting
- Infection Control
- Agricultural works
- Foundry operations
- Undercoating
- Laboratory settings
- Petrochemical Processing
- Torch cutting
- Brazing

Product Ordering Information

Code	Description	Unit/box	Box/Case	Qty/Case
82105	NIOSH N95 Particulate Respirator VALVED	10 sets/box	12 boxes/case	120 pcs./case
72105	Replacement Filter for 82105	20 pcs./box	12 boxes/case	240 pcs./case
82115	NIOSH N95 Particulate Respirator VALVED with Activated Carbon Layer	10 sets/box	12 boxes/case	120 pcs./case
72115	Replacement Filter for 82115	20 pcs./box	12 boxes/case	240 pcs./case

Fitting Instructions:



1. Hold respirator in your hand as shown, with the nosepiece at your fingertips & the headbands hanging freely below your hand.
2. Place respirator under your chin with the nosepiece up.
3. Pull the top head-band to top back of head above the ears.
4. Pull the bottom headband hook and lock behind the neck, below the ears. Adjust the strap length to optimum comfort.

Filter Replacement Instructions:



1. Hold the mask with inside facing upwards
2. Unwind the valve lock to filter
3. Remove the used N95 filter and replace it with a new one